
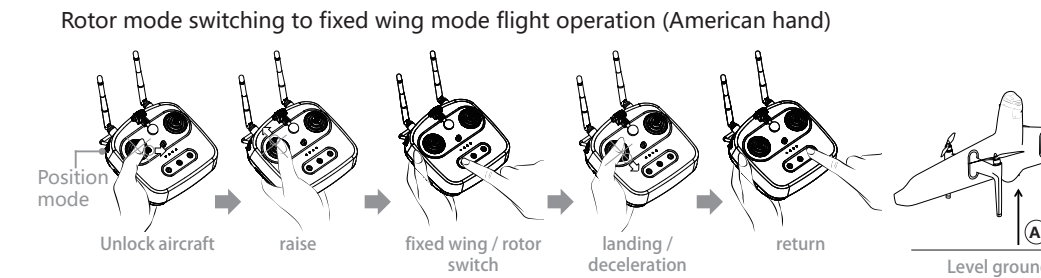
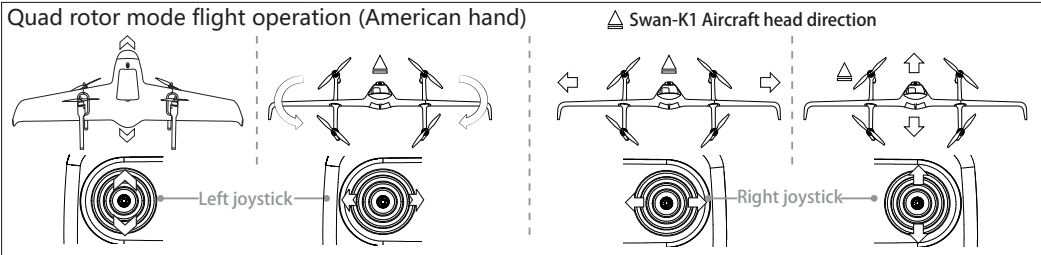
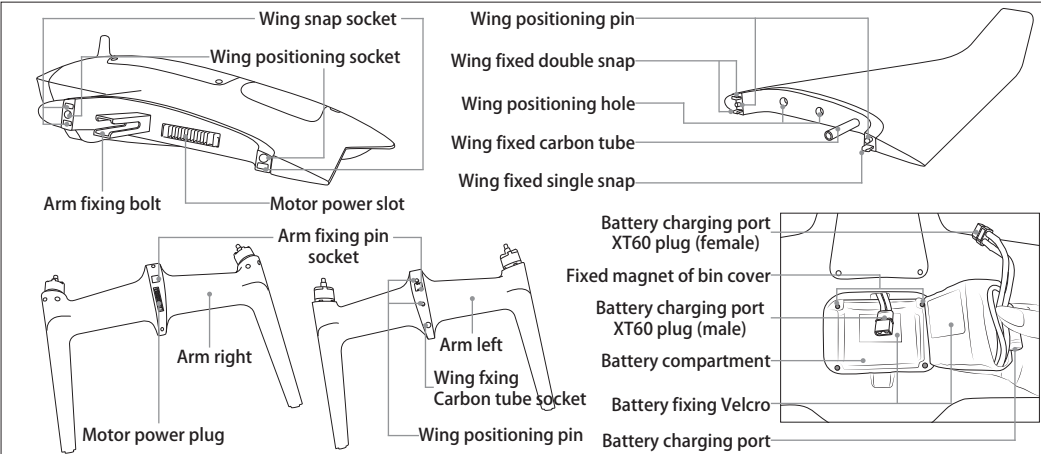


SWAN-K1





Quick start guide V1.2 2021.1

©2021 HEQ Intelligent All rights reserved

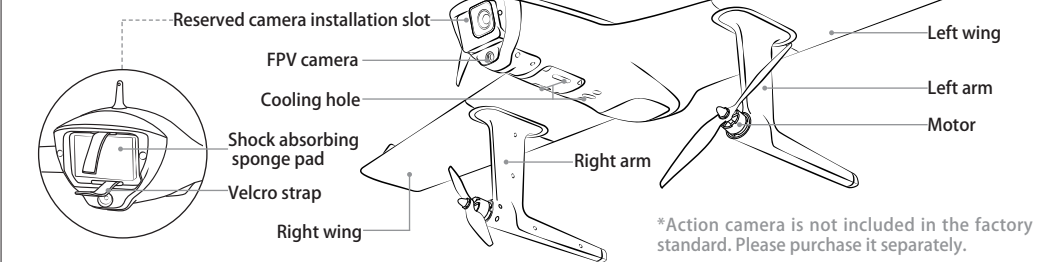

⚡ Press A key or B key, the key light will turn on; press again, it will turn off.

⚡ The above is the operation diagram. Please hold the control with both hands.

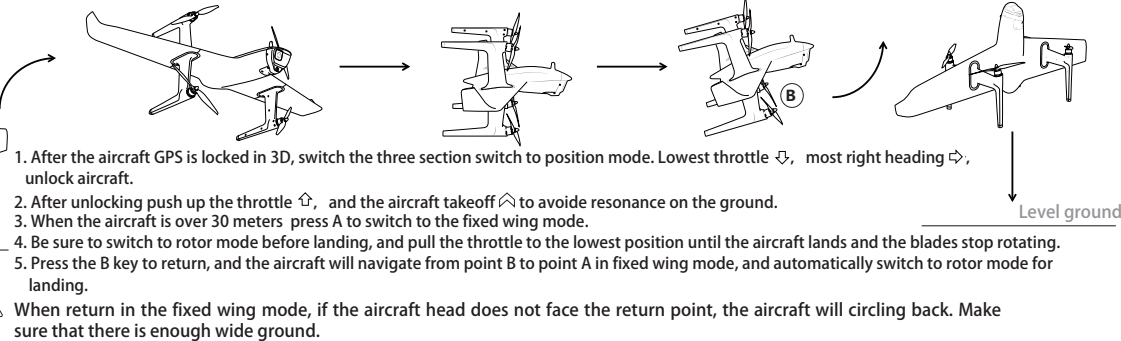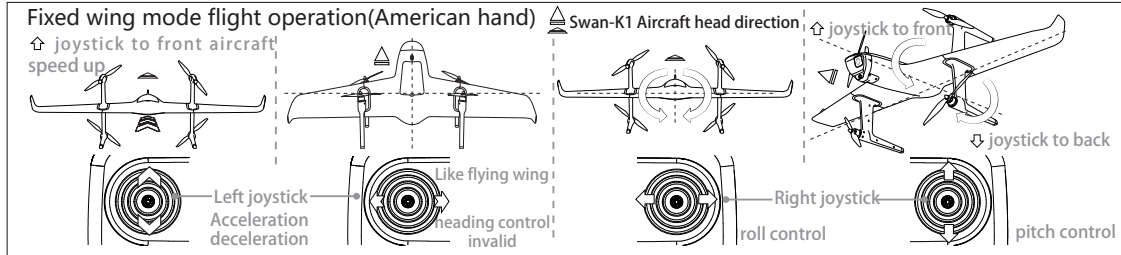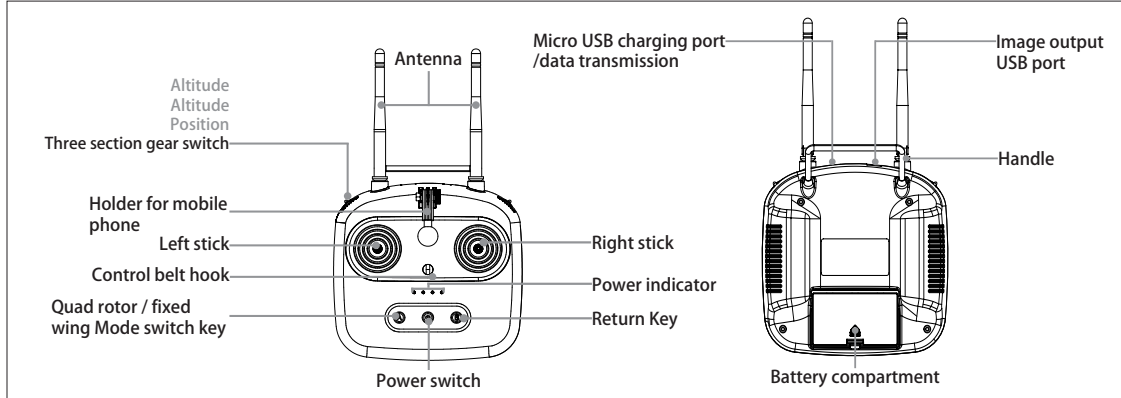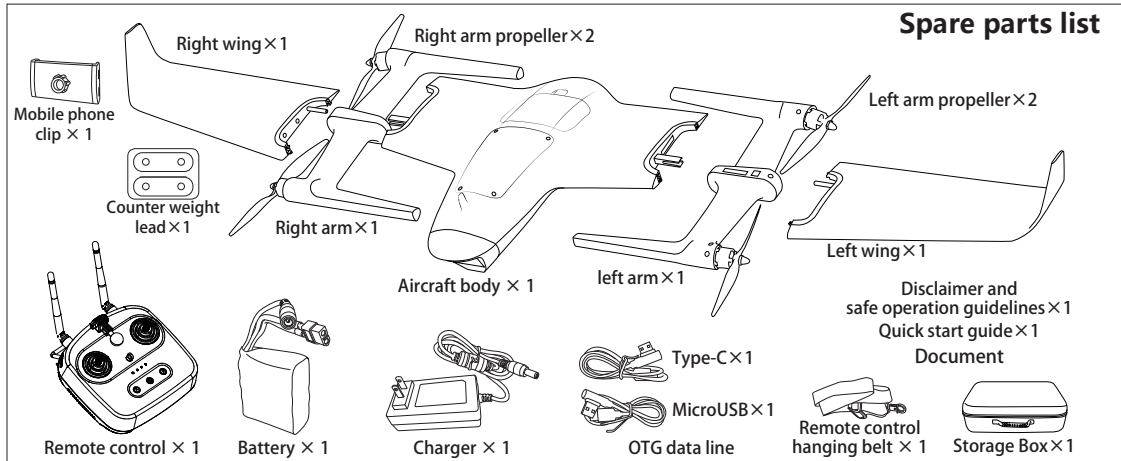

SWAN-K1 Quick start guide

©2021 HEQ Intelligent All rights reserved

01 Watch the teaching video / download APP

Watch the entry teaching video. Please use the mobile app to scan the QR code to watch the video. HEQ Technical support: http://www.hequavtech.com/multi_rotor/



Scan QR code to watch video

Scan QR code to download app

Official account

*App only supports Android system.

⚡ Please charge the remote control and power battery before flying. Please refer to step 02 for specific operation of power battery charging.

⚠ The regulations vary from country to country. Please verify your real name according to the regulations of your country/region.

Please scan the WeChat QR code to pay attention to the official account, and knows more product information from it.

※ The contents are subject to change without prior notice.


※ Due to product iteration, there are slight differences in appearance. Please refer to the actual product.

02 Battery charging and maintenance

Charging:

1. Pull out the battery compartment cover.
2. Take out the battery.
3. Plug the charger into the socket first, and then insert the battery charging port into the charger connection port. After charging done, the indicator light changes from red to green.

Attention: the battery should be charged and discharged once for about three months to keep the battery active.

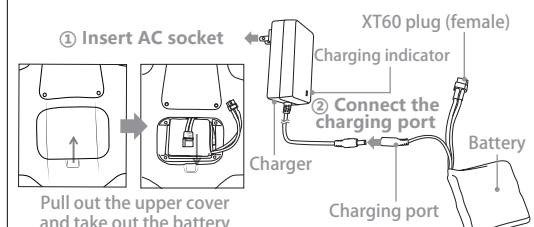

⚠ After the flight, please place the battery in a cool and ventilated environment, and recharge it after the temperature drops.

⚠ When charging, be sure to plug in the charger first and then the battery charging port.


⚠ After fully charged, please disconnect the charger from the battery and unplug the power supply. Check and maintain the charger and battery regularly. Check the appearance and circuit of the battery regularly. Do not use damaged chargers and batteries.

03 Remote control

1. Unfold the remote control antenna and point it vertically upward.

2. Press and hold the power Key, and the four LEDs will be on from left to right in turn, and they will remain on when the power is full. Press and hold the power button to turn off. The 4 LEDs turn off from right to left.

3. Install the mobile phone clip, fix the mobile phone and connect it to USB. Mobile indicate: Allow application "HEQ FLY" to access the USB device? Please select "OK".

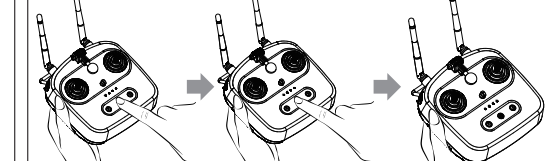


Install the mobile phone clip and Click the Bluetooth icon to connect the mobile phone. Select T10.

⚡ When fully charged, 4 LED indicators are always on.


⚠ Please charge the remote control battery fully before flying.

04 Installation and disassemble of aircraft

Installation: after installing the left and right arm, install the wing, and be sure to lock the clasp.

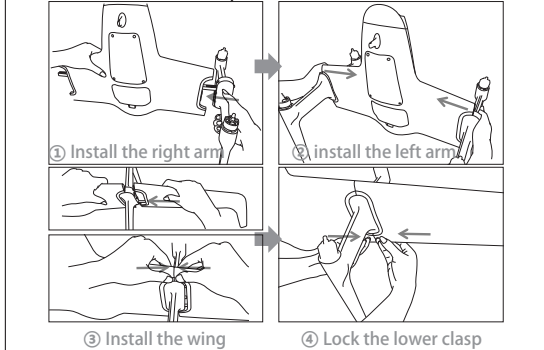

Disassemble: after removing the left and right wings, dismantle the arm.


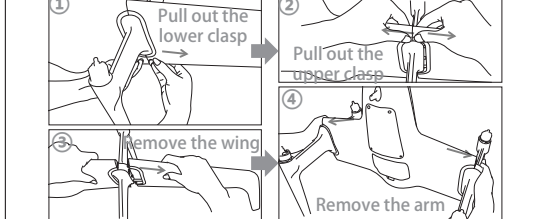


05 Power up the aircraft

1. Pull out the upper cover of the battery compartment, store the charging head, and align the side down with the Velcro in the battery compartment to fix the power battery.

2. Connect XT60 to power up the aircraft.

3. Store the wire and cover the battery compartment well.

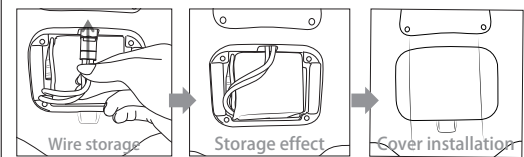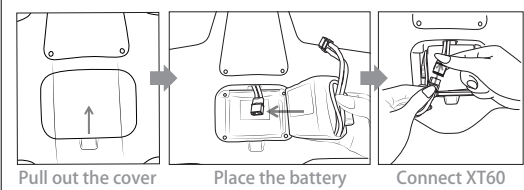

⚡ After storing the battery wire, the battery compartment cover can fit with the body.


⚠ Make sure the power battery is fully charged before flying.

⚠ Before take-off, please check whether the battery compartment is fully fitted with the body to avoid falling off during high-speed flight.

06 Calibration of magnetic compass and airspeed meter

1. Calibrate Magnetic Compass: open app to enter sensor interface, click magnetic compass and calibrate step by step; first place the aircraft according to the figure, and then rotate the aircraft anticlockwise.

2. Calibrate the airspeed meter: cover the air inlet of the airspeed meter first, and then gently blow the air into the airspeed meter after the prompt "please blow gently aim at the air inlet of the airspeed meter".

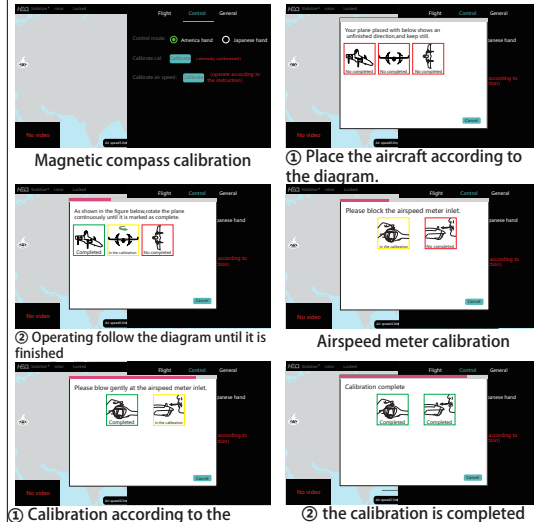


07 Installation of action Camera (optional)

In order to give customers the ultimate experience of fixed wing aerial photography, a 68mm × 50mm mobile camera installation slot is reserved in the head, which can be expanded to obtain better flight video. If you do not install a action camera, please tie the weight lead to get a more stable FPV flight experience.

1. Place the camera in the slot reserved for the camera.

2. Tie the Velcro strap to the action camera.

3. Press the video key before flying.

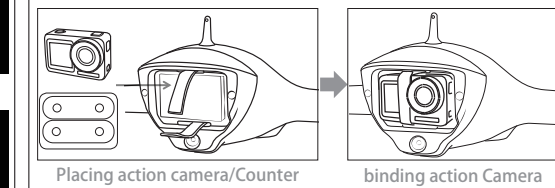

⚡ In order to ensure that the aircraft can quickly get GPS and then into 3D lock state, it is recommended that you install the camera when the aircraft can be switched to position mode.

⚡ It can support GoPro 5, 6, 7, 8; DJI action.


⚠ The head part needs lead counterweight (the maximum load weight is about 120g).

*Action camera is not included in the factory standard. If necessary, please purchase it separately.

08 Installation of propeller

1. The propeller rotates clockwise / anticlockwise. Pay attention to the blade identification during installation: the black nut is clockwise, and the white nut is counterclockwise.

2. The propeller with clockwise rotation is fixed by anticlockwise rotation; the propeller with counter clockwise rotation is fixed by clockwise. Make sure the blades are tightened before takeoff.

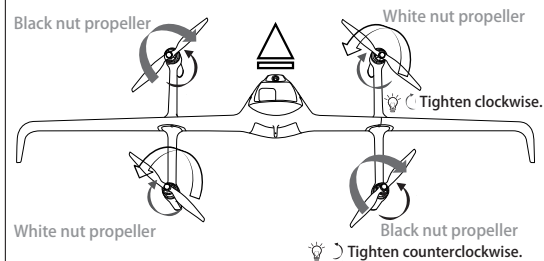

⚠ Please install the propeller in strict accordance with the diagram and make sure it is tightened before taking off.

⚠ Do not use old and new propellers together at the same time.

⚠ Keep away from the crowd when taking off / landing.

⚠ Do not touch the high-speed rotating propeller, or you may be seriously injured by the propeller.

⚠ Please use the official original propeller. The manufacturer will not be responsible for the damage caused by the use of the auxiliary propeller.