

BEE35

Manual



SpeedyBee APP




Installation guide




Facebook QR Code

■ CNC head part installation

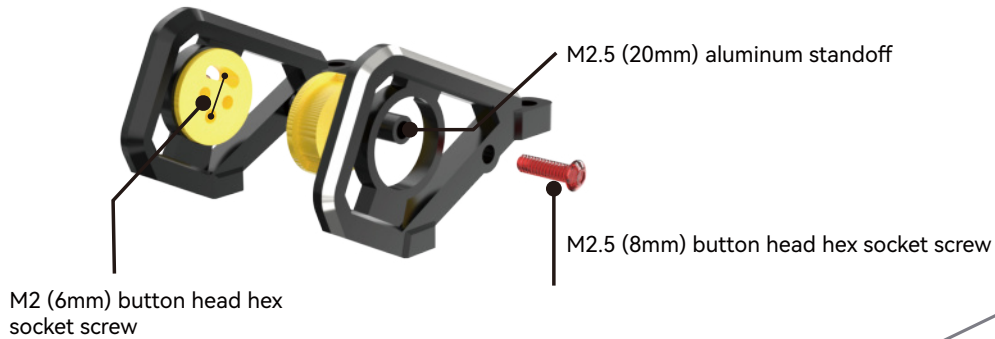


■ Antenna Installation Sequence

insert the O-ring into the antenna to secure it on the TPU antenna base.

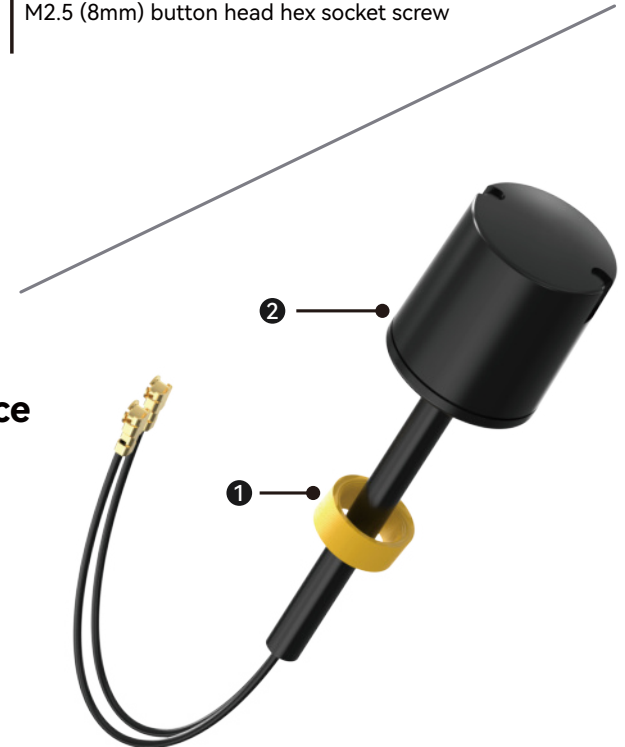

◆ FC Mounting Hole | Motor Mounting Hole

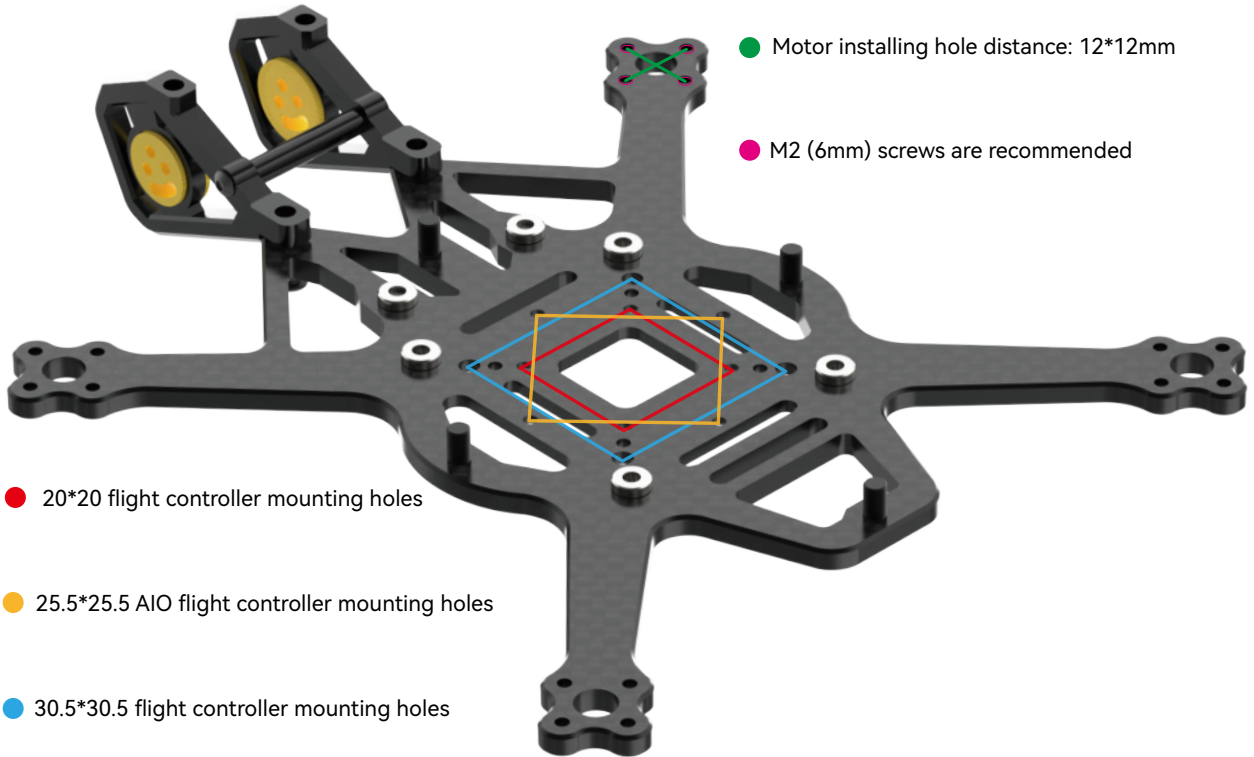


Suggesting place for main power cable



It is recommended to keep the power cable of ESC to be about 100mm.
Please refer to your own battery for actual length.

◆ CNC cooling part installation

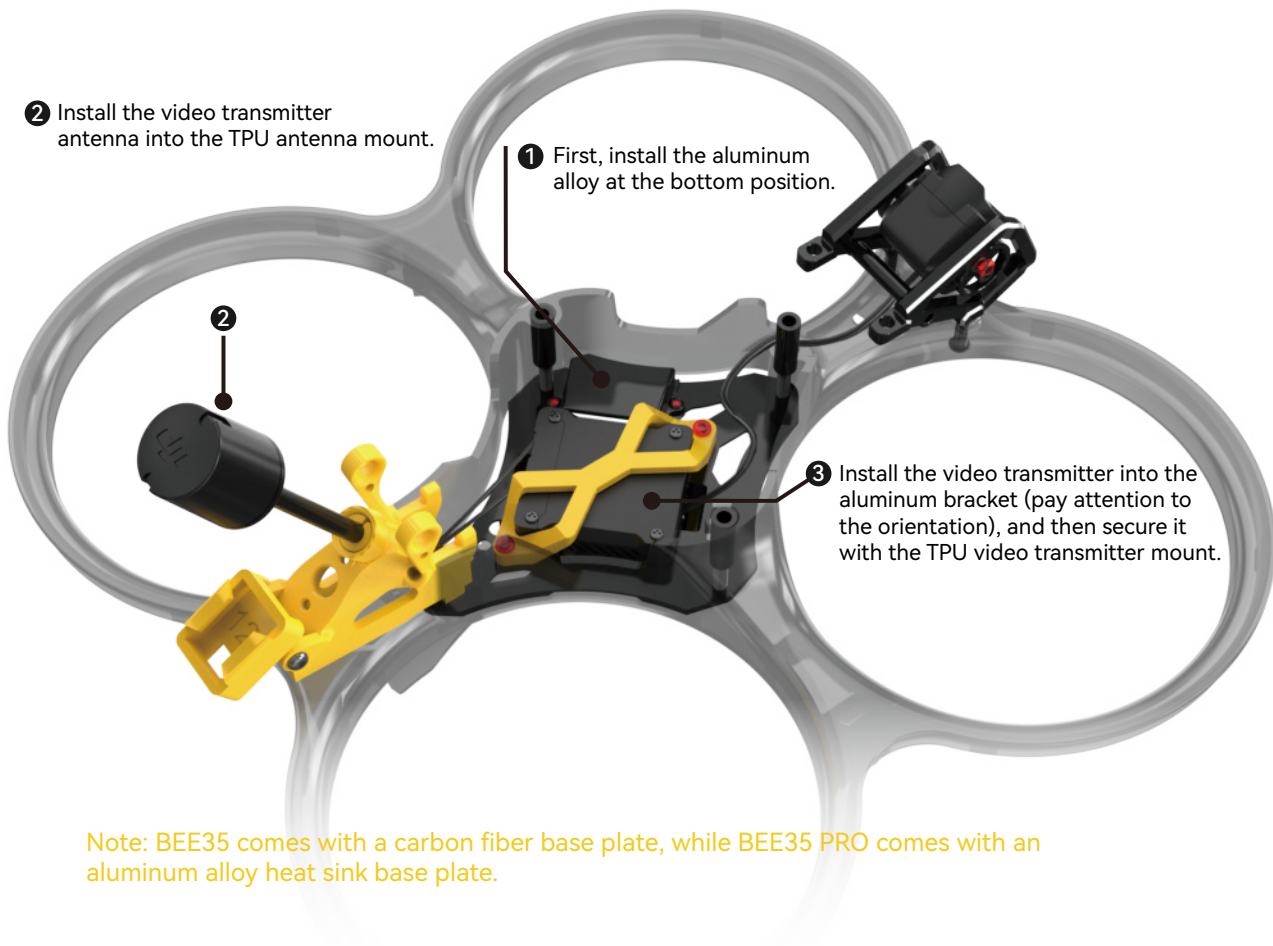

◆ CNC cooling part installation




M2 (3mm) button head hex socket screw

O3 Air Unit or RunCam Link installation
O3 Air Unit或RunCam Link

Bottom screw installation



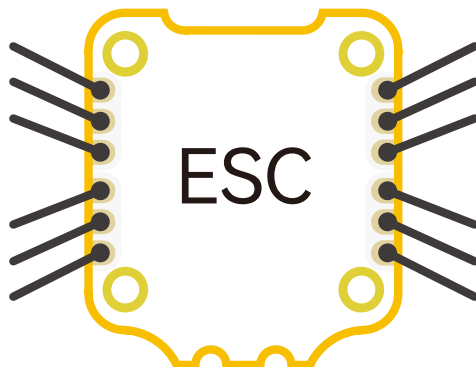

Recommended cable length for 25.5 AIO: 52mm
Recommended cable length for 20mm MINI: 62mm




*(Note: Assembly diagram, motor not included in the frame)

1:1 Scale




Multi-function Antenna Mount

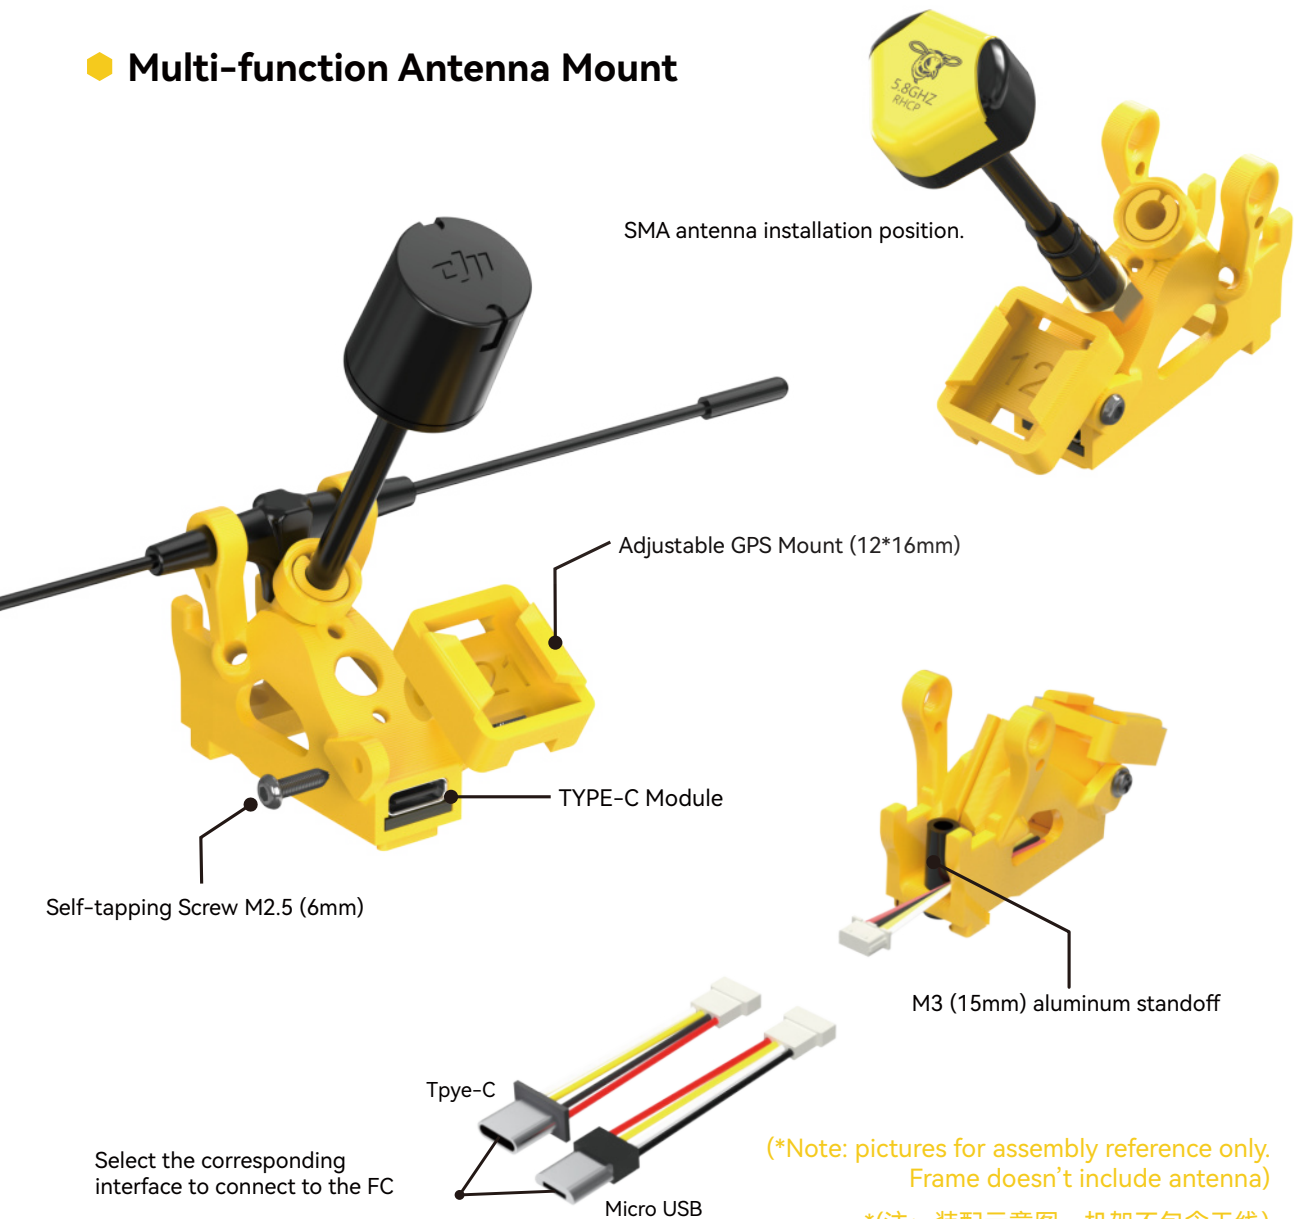

(*Note: pictures for assembly reference only.
Frame doesn't include antenna)

*(注：装配示意图，机架不包含天线)


Installation Illustration

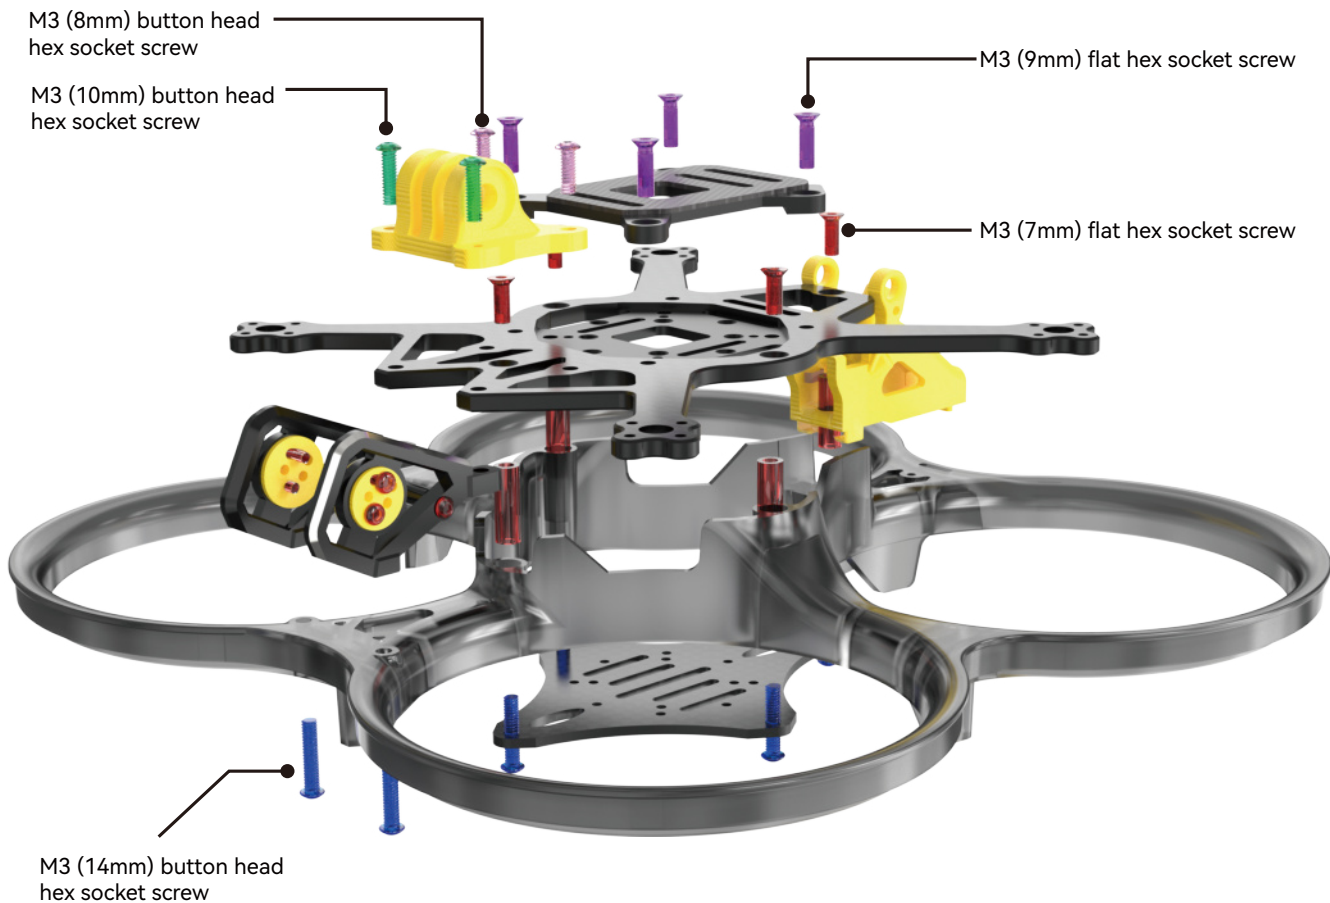

T-antenna installation



◆ Detachable anti-vibration camera base mount

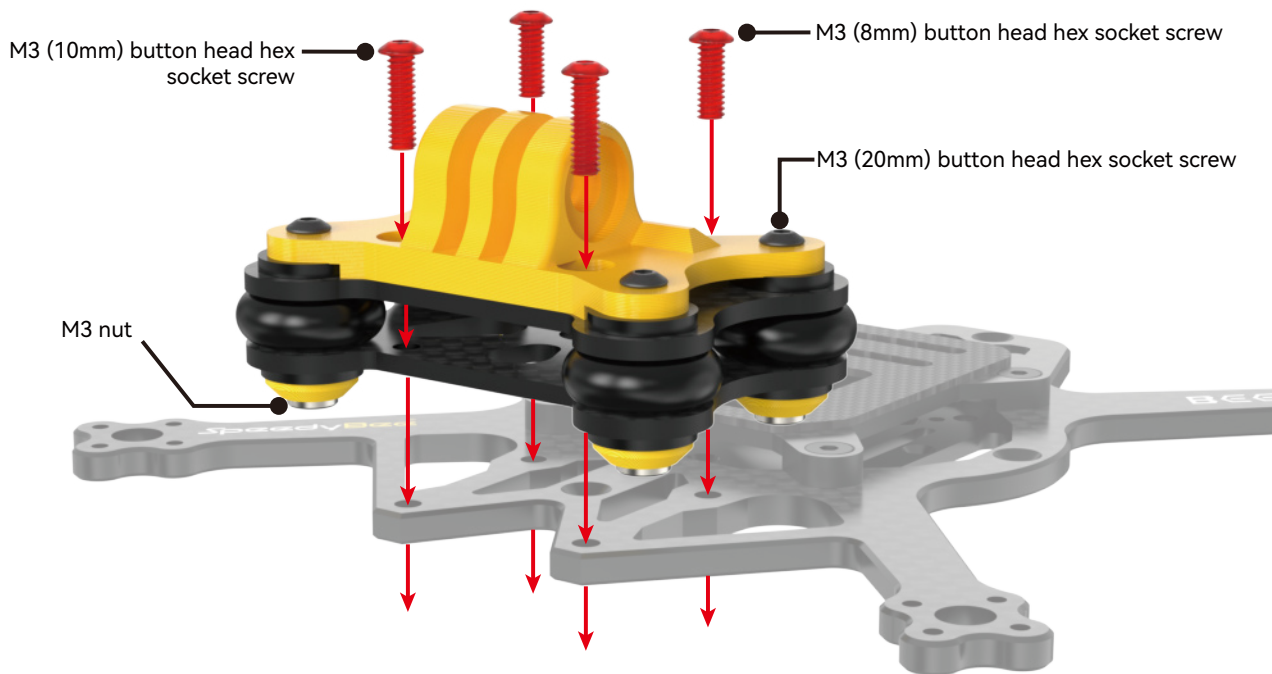

Note: This accessory needs to be purchased separately