 
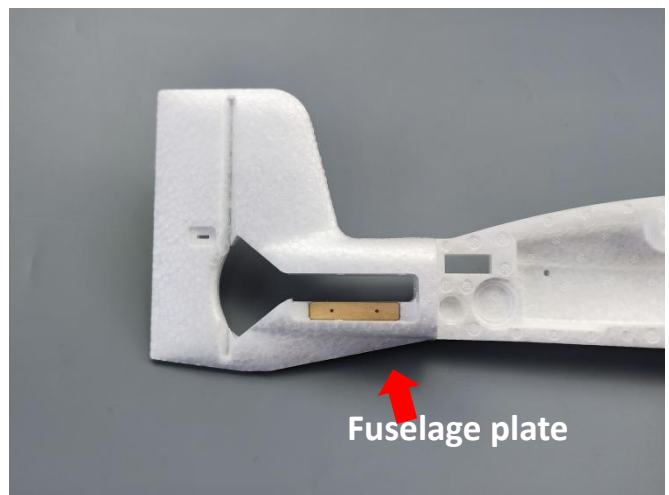 
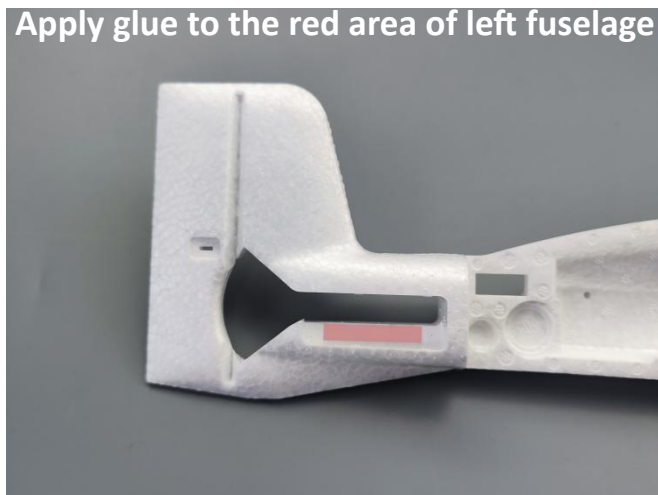 
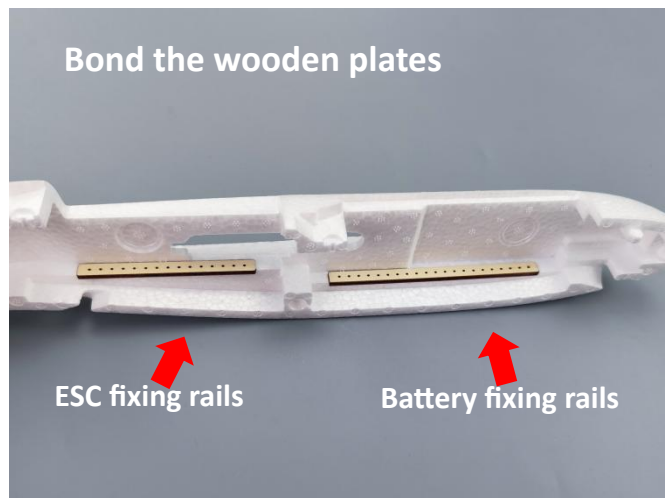 
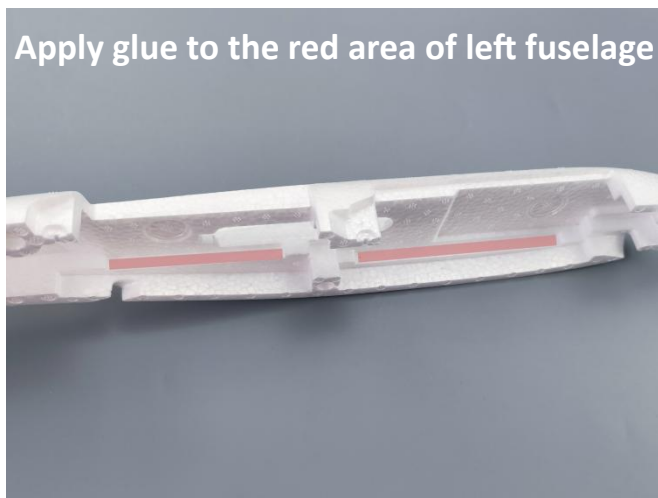 


H-1 Assembly Guide

 
 
 
 
 
 
Fuselage Assembly

Bond the wooden plate and fuselage quick-release mounting base

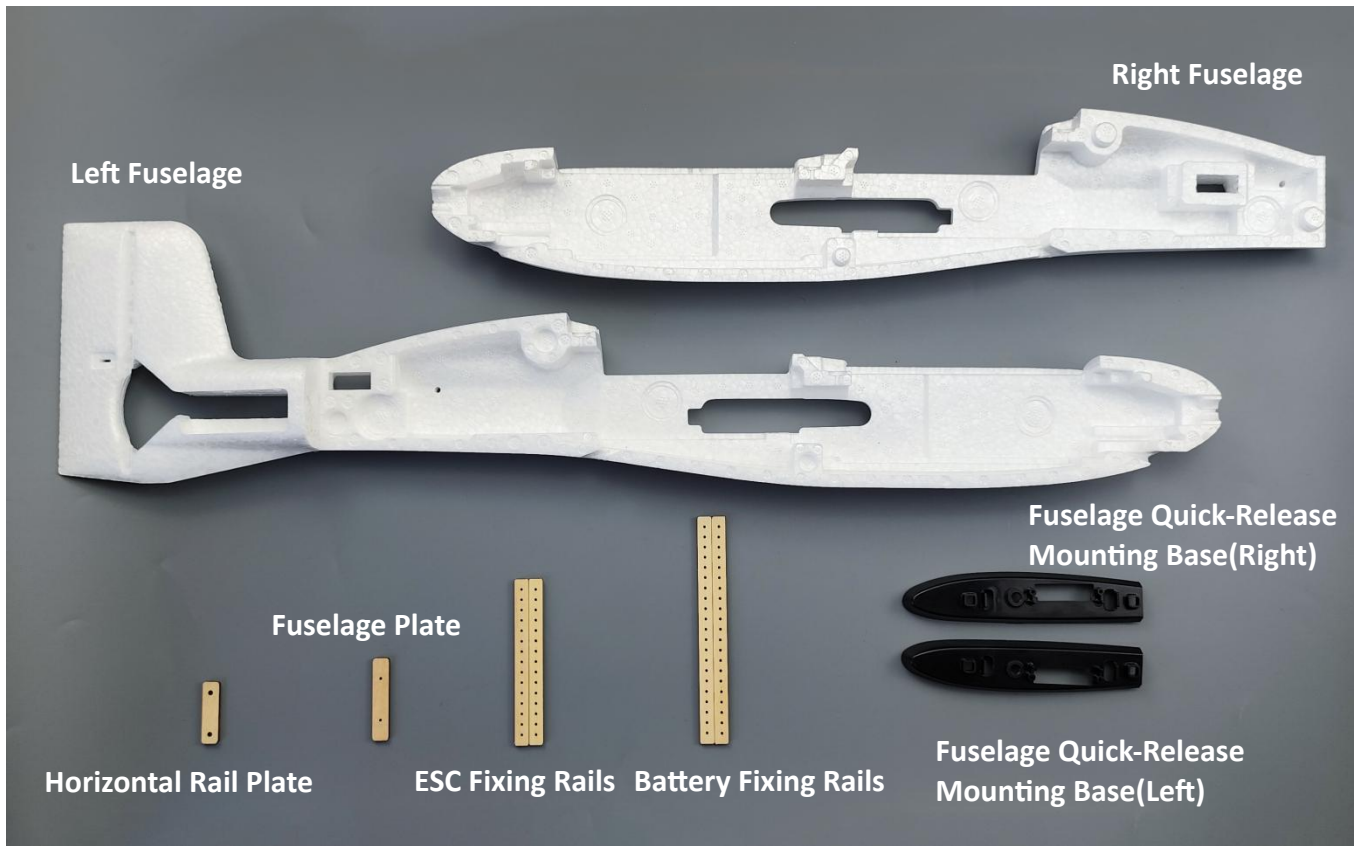

Fuselage Assembly

Bond the wooden plate and fuselage quick-release mounting base

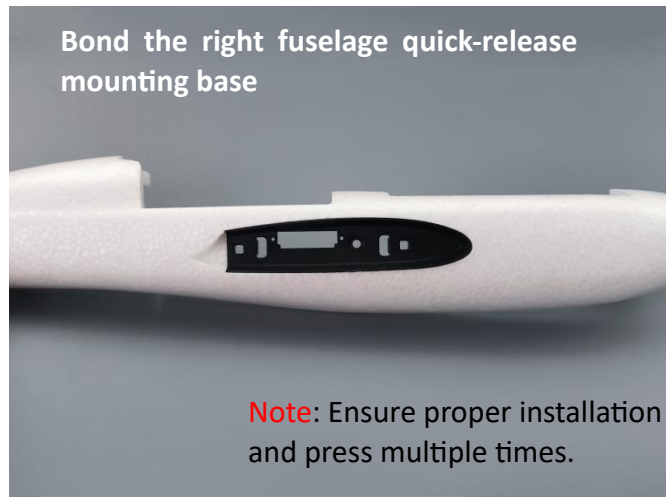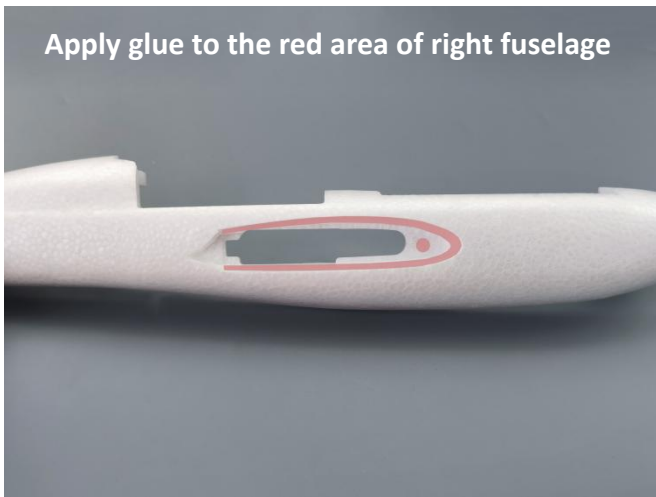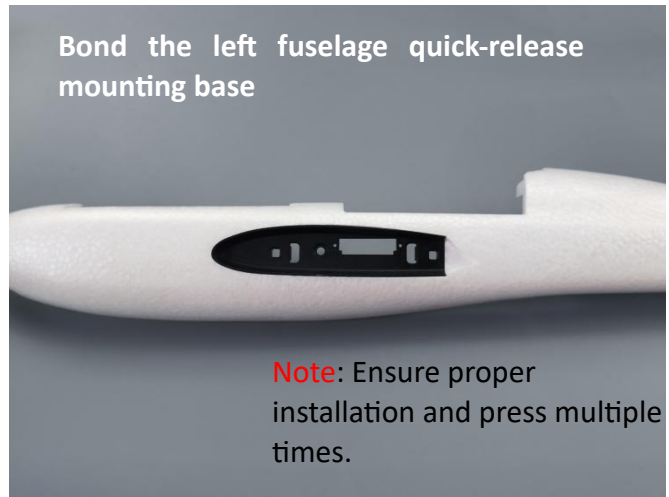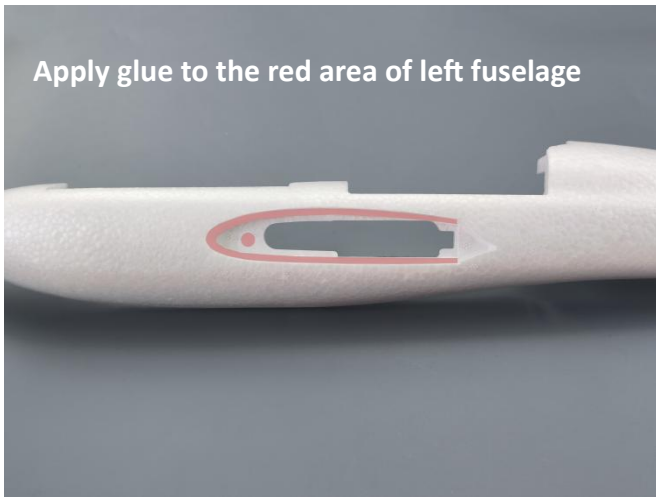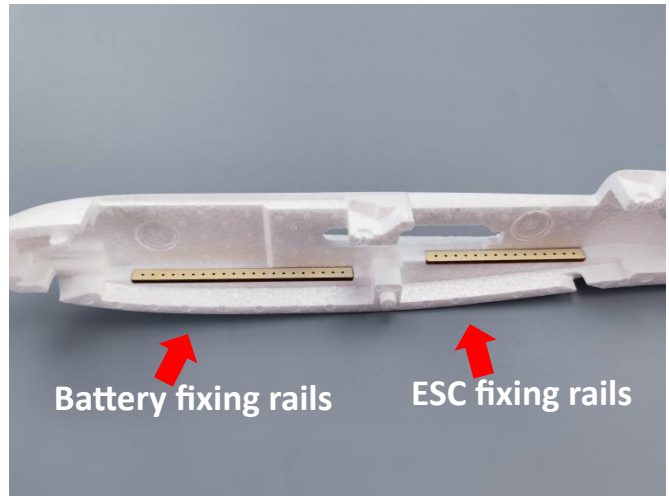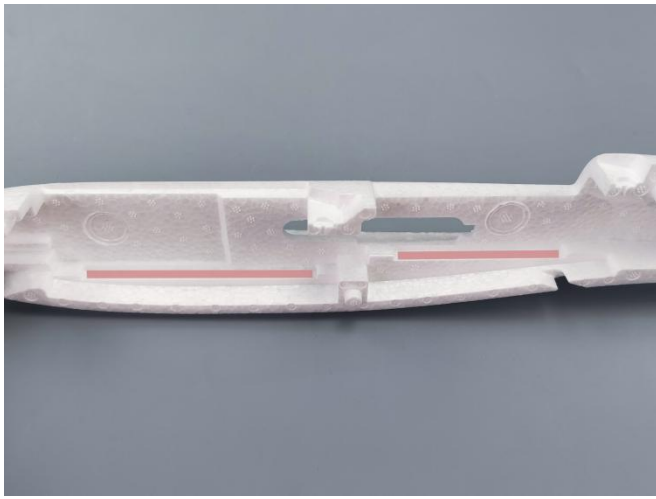

Note: Ensure proper installation and press multiple times during adhesion, press as needed to avoid improper adhesion.

 
Fuselage Assembly

Bond the left and right fuselage

Apply glue to the red area of right fuselage



Note: Apply glue to the red area to rear-fuselage

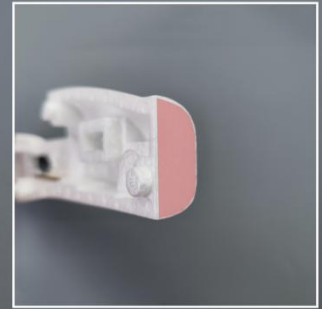

Bond the left and right fuselage



 
Note: Ensure proper installation and press multiple times.

Note: Ensure proper installation and press multiple times during adhesion, press as needed to avoid improper adhesion.

Fuselage Assembly

Bond magnets

Apply glue to the red area to bond magnets

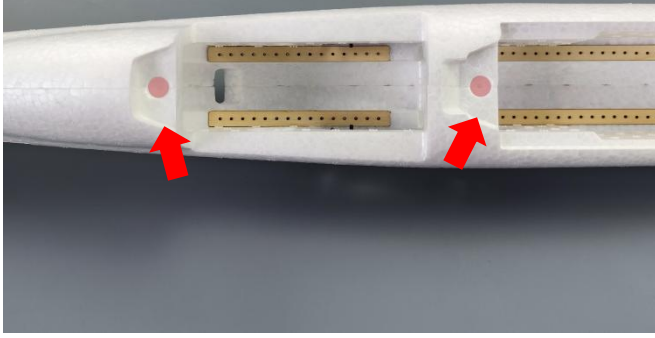


Need to cut more foam parts in rear hatch cover




Rear hatch cover

 Servo cover

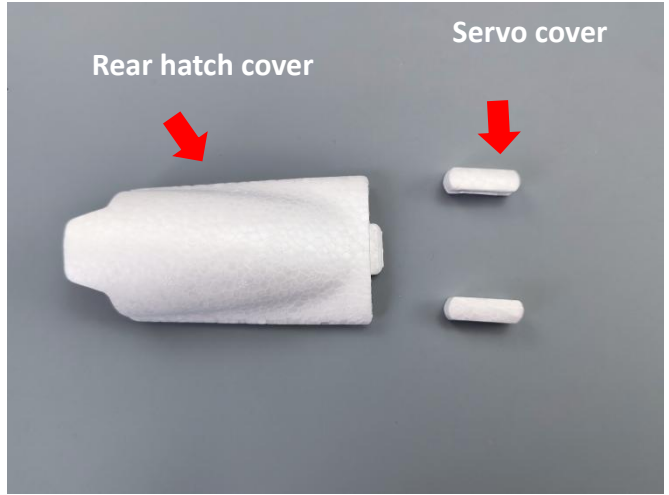





 
Apply glue to the red area to bond magnets

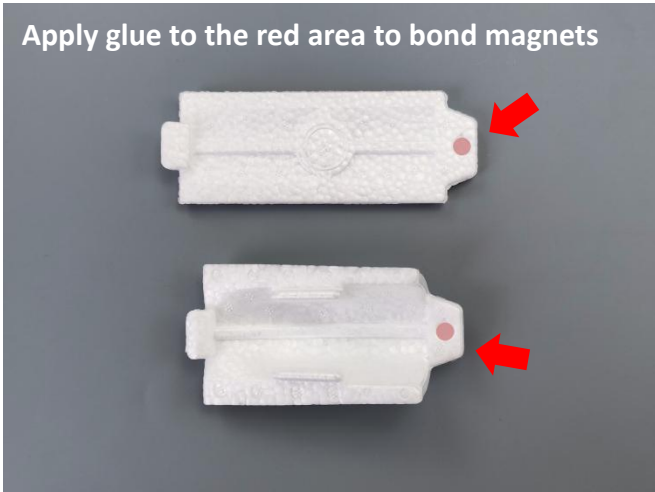

Note: Ensure proper installation and press multiple times during adhesion, press as needed to avoid improper adhesion.

Fuselage Assembly

     
Install the electronic components and battery mounting base

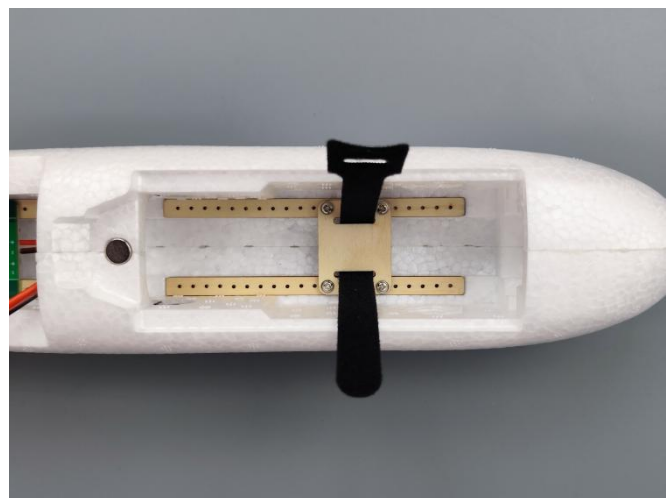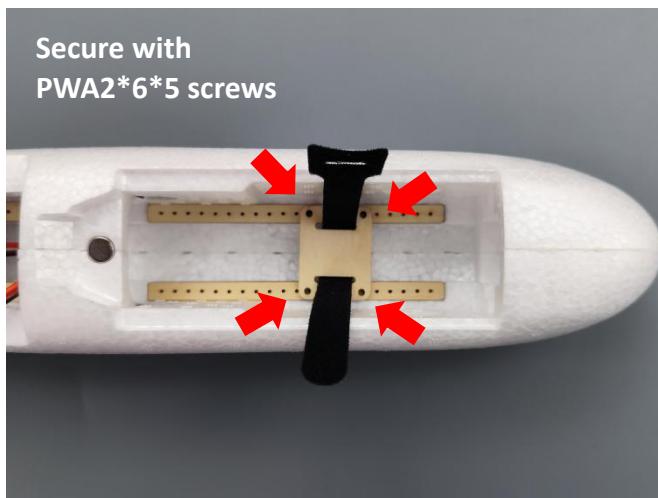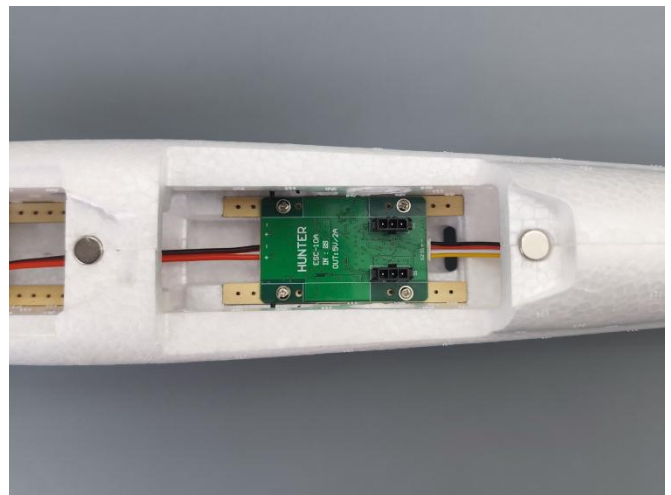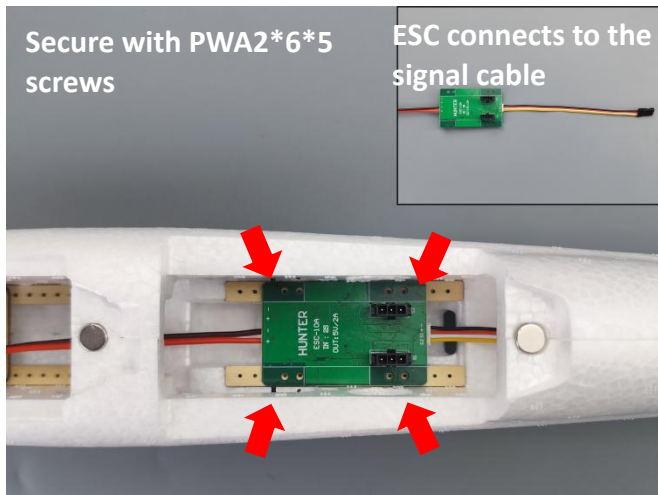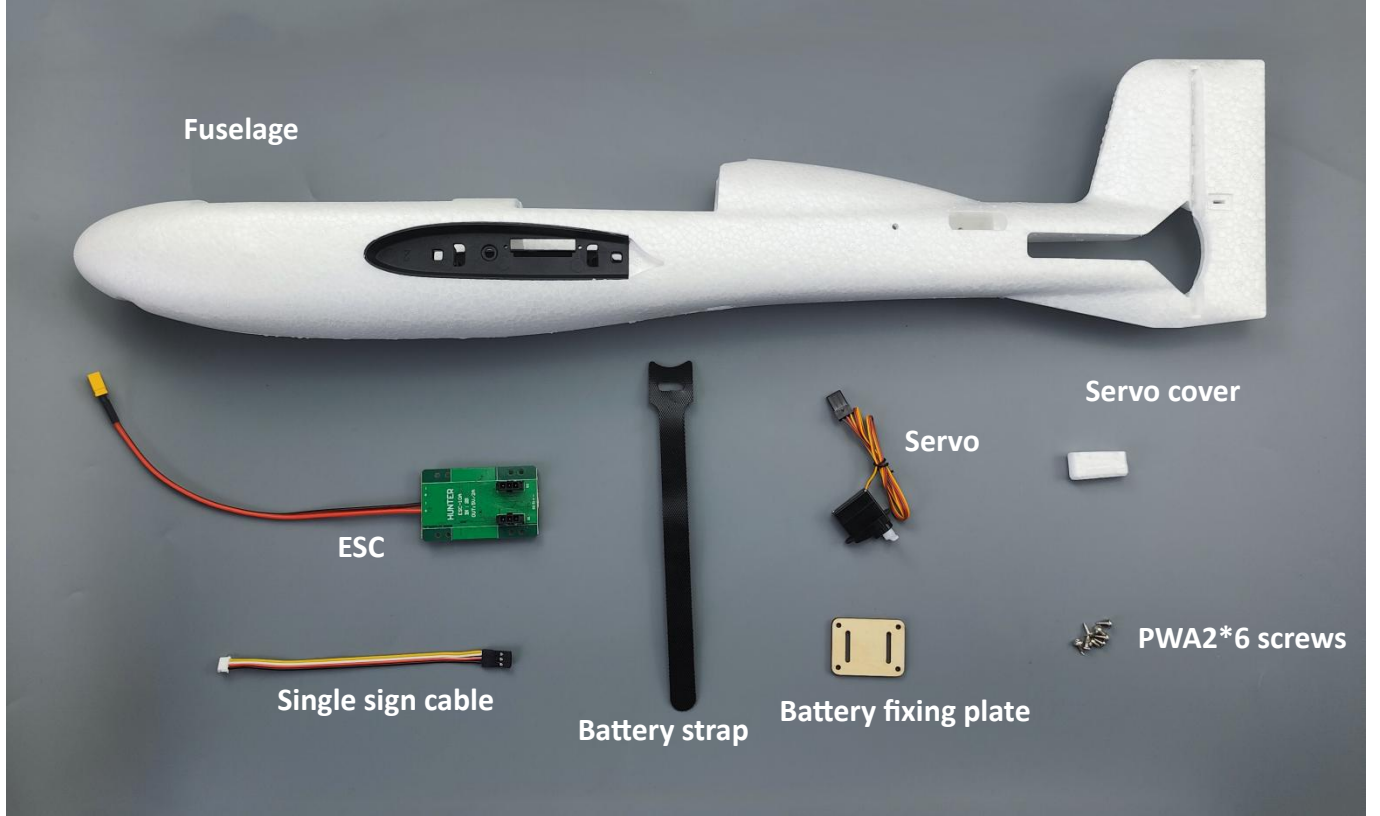


Fuselage Assembly

Install servo

 
Install servo

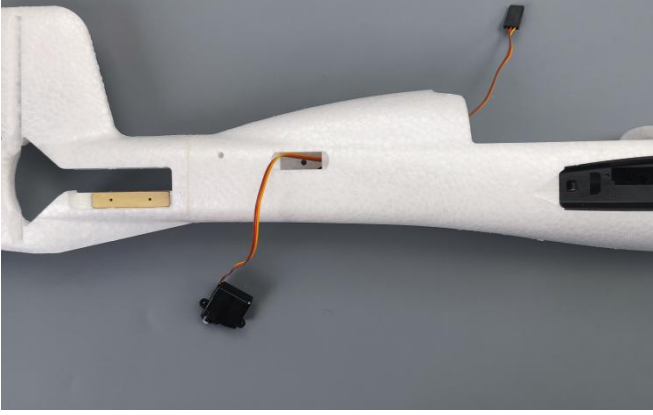


Note: Installation direction

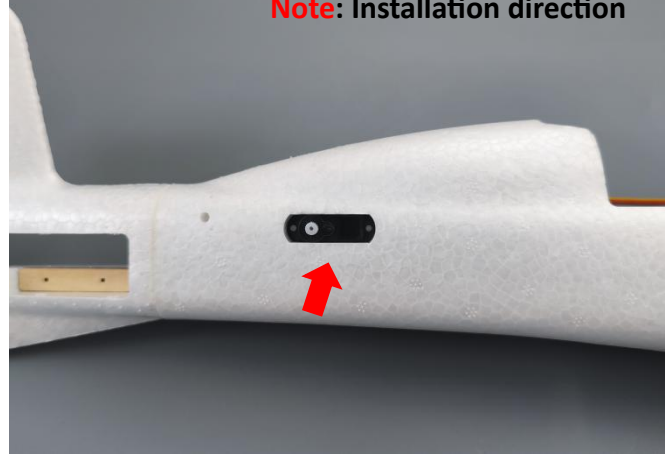 

Install servo cover

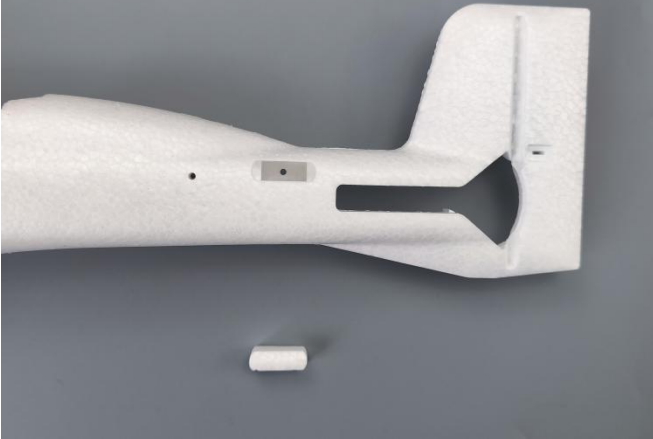 

No glue required for installation




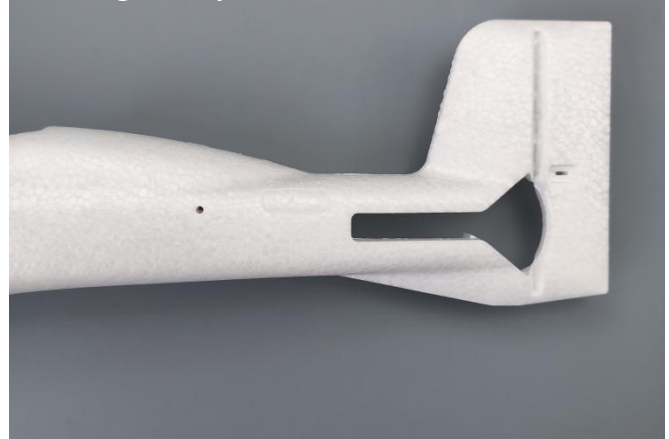 


Fuselage assembly completed



Wing Assembly

    Need to prepare:

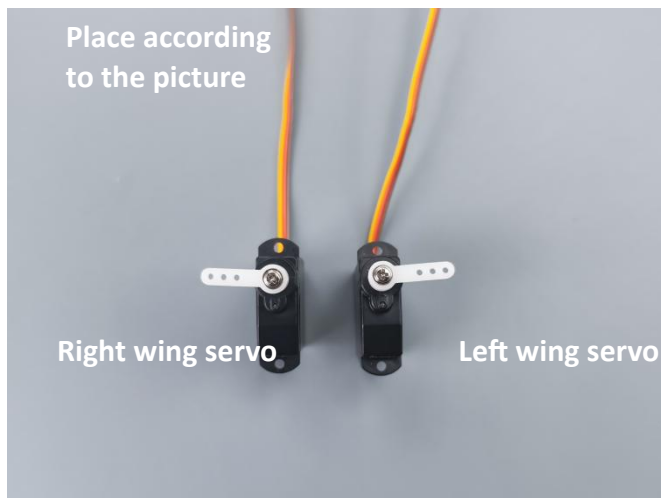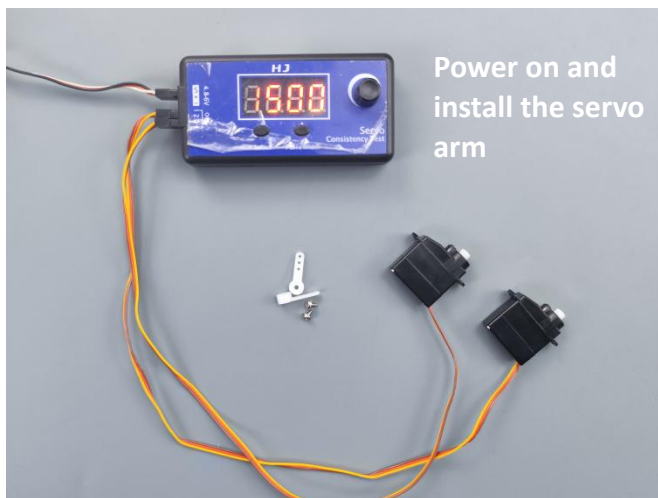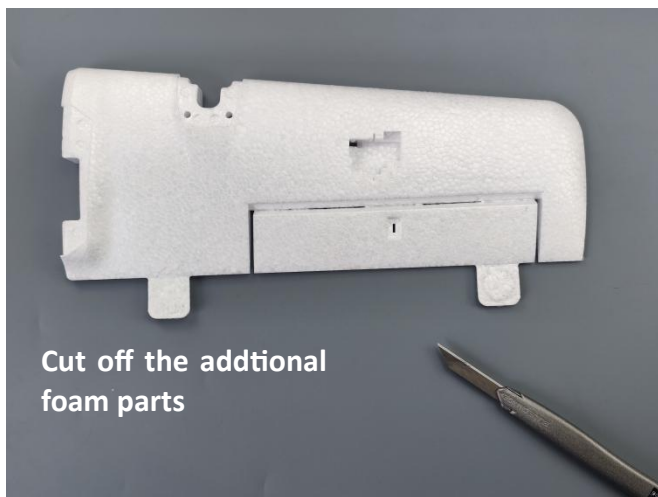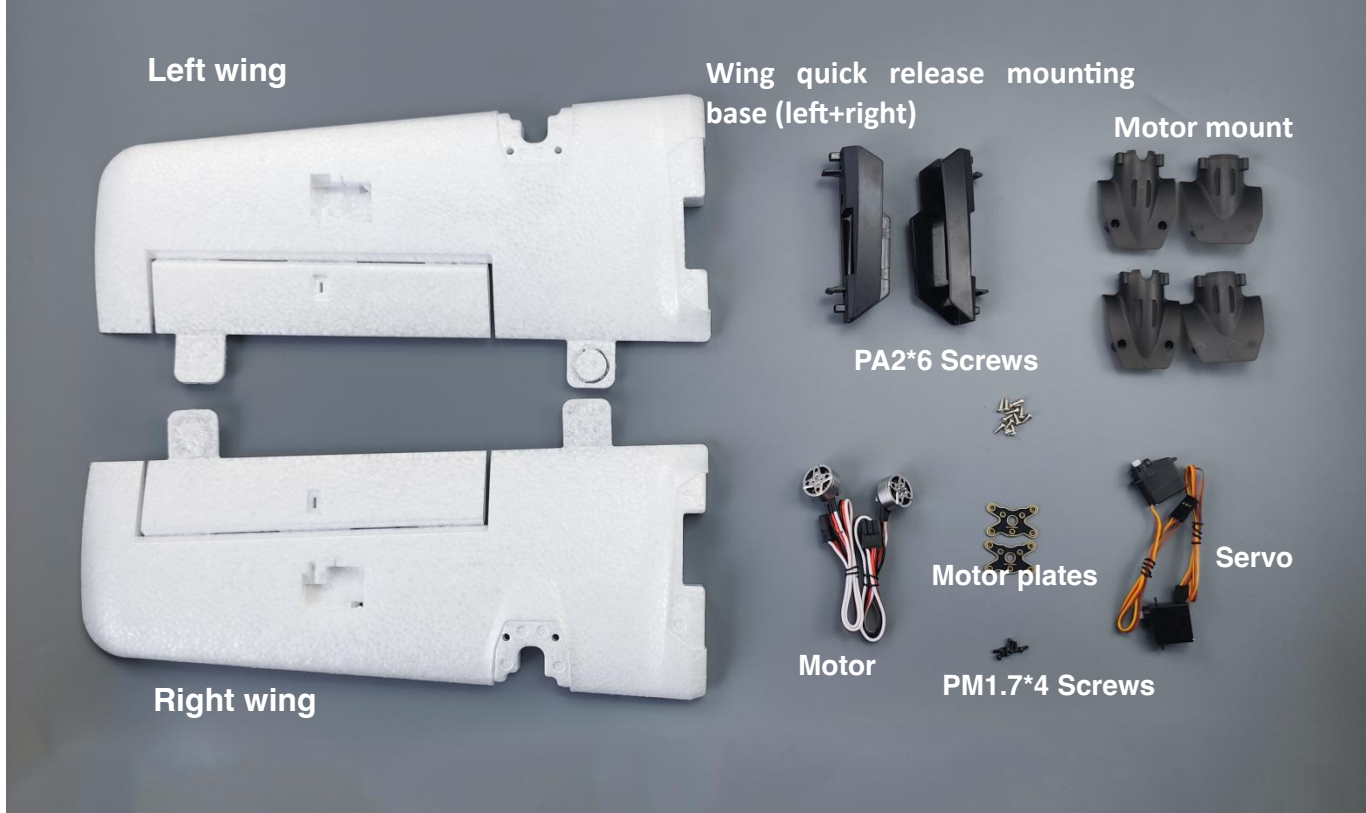


Wing Assembly

Install wing electronics


Apply glue to the red area



 
Apply glue on both sides

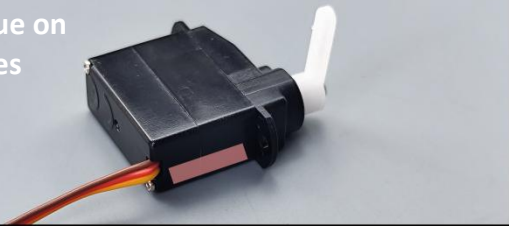


Install Servo

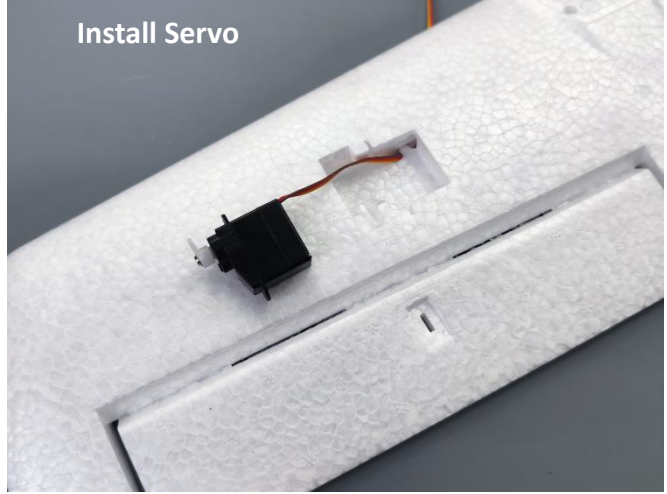 

Ensure proper installation

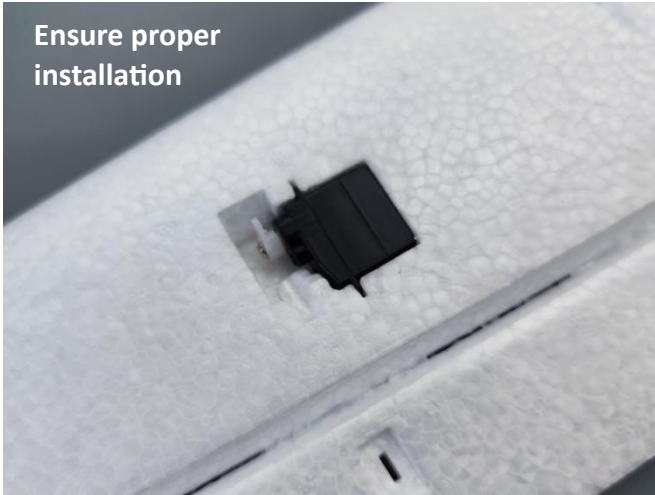 

 
Straighten and press wires into the slot on the reverse side

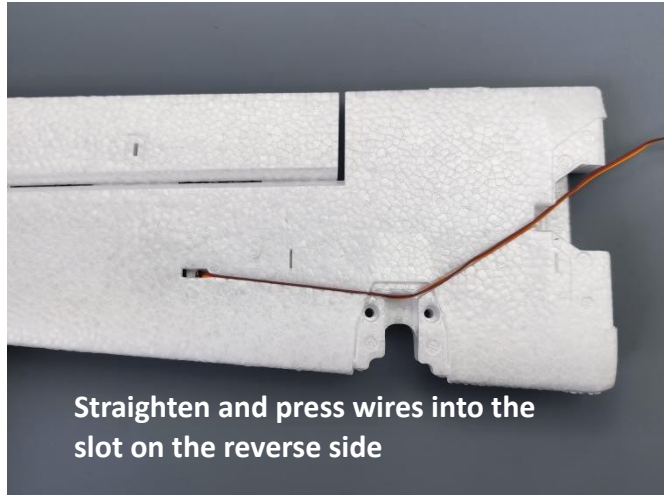

Install motor mount



 Secure with PM1.7*4 screws

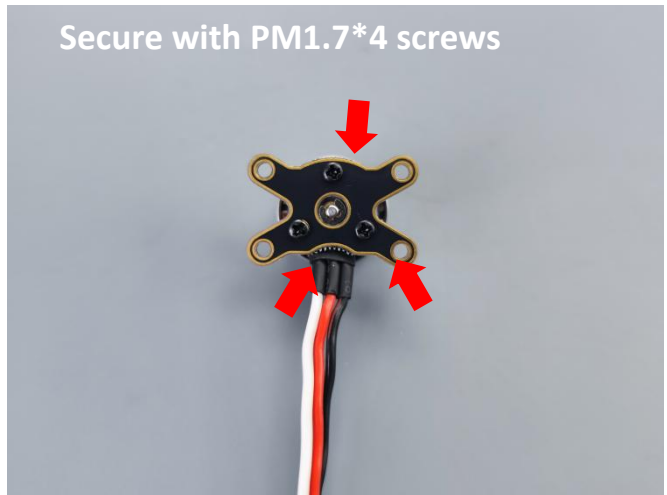


Wing Assembly

Install Wing Electronics

Secure with PA2*6 screws



 
Install wing quick-release parts

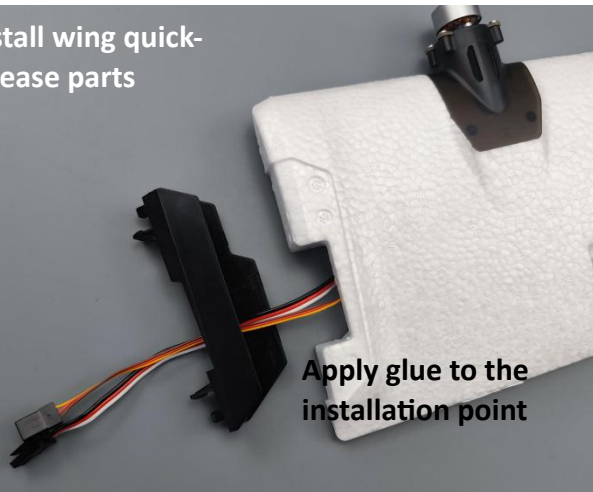

Ensure proper installation





 Wing Assembly Completed

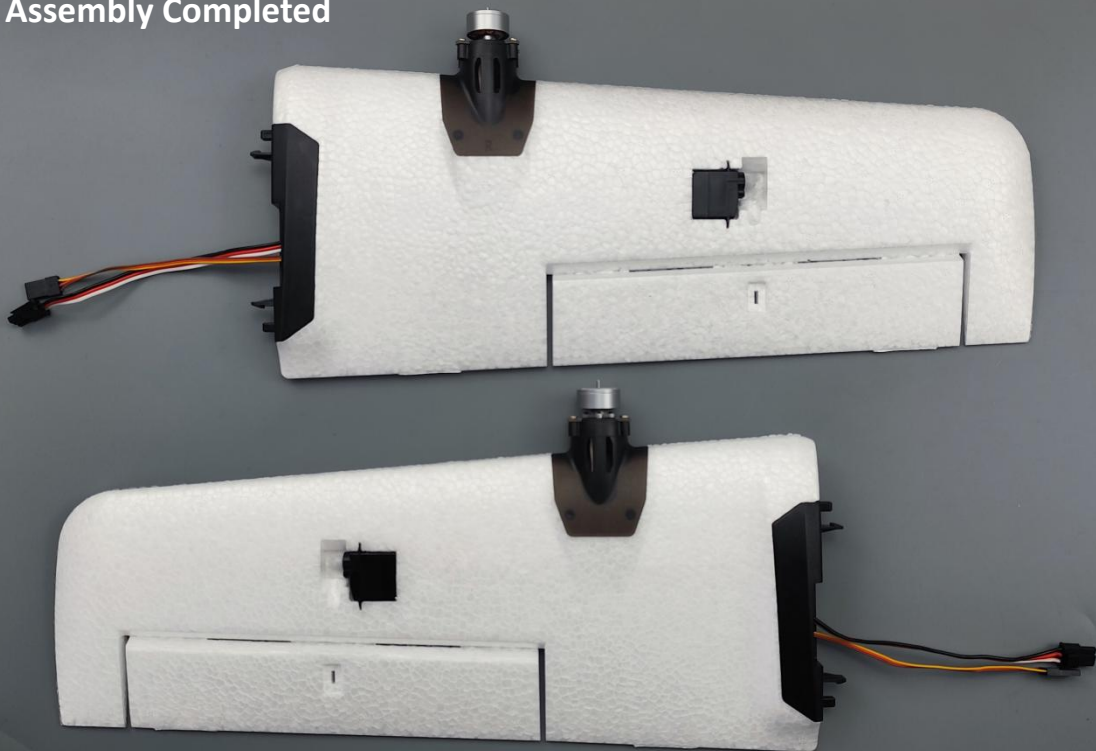

Horizontal Tail assembly



 
 
Install Horizontal Tail

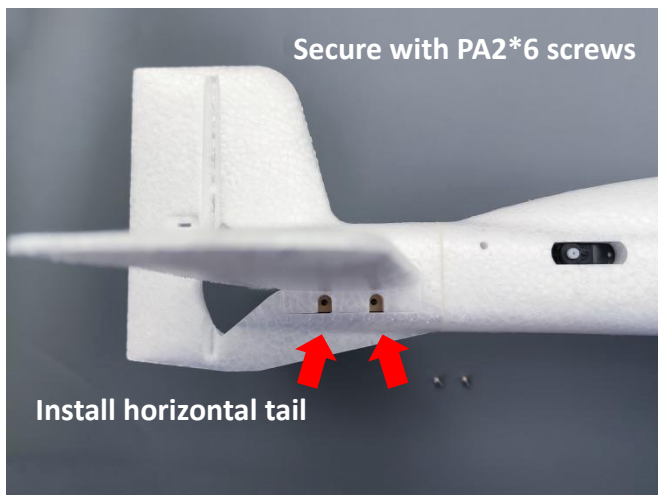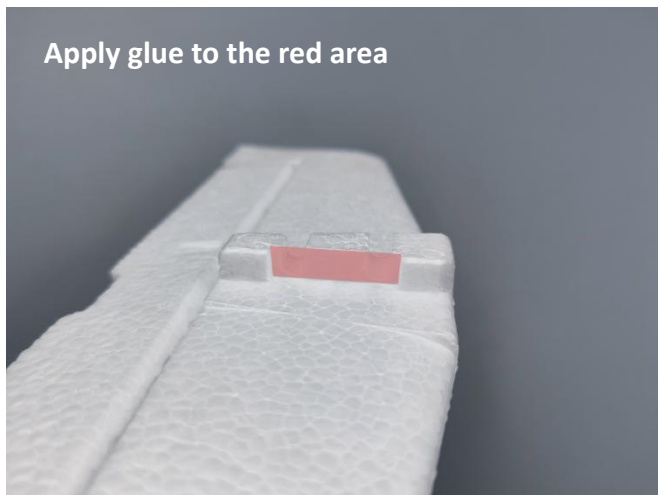

Note: Ensure proper installation and repress during adhesion, press as needed to avoid improper adhesion.

H-1 Assembly

    
Install H-1

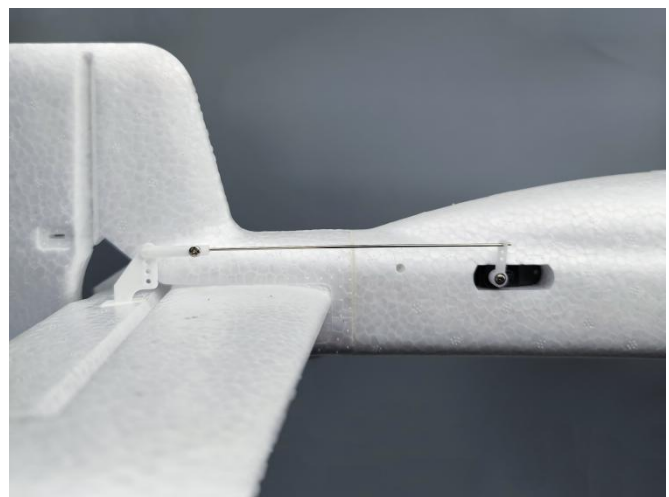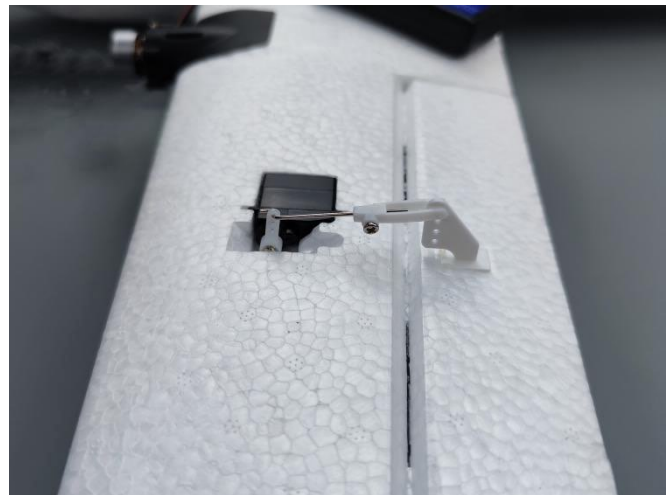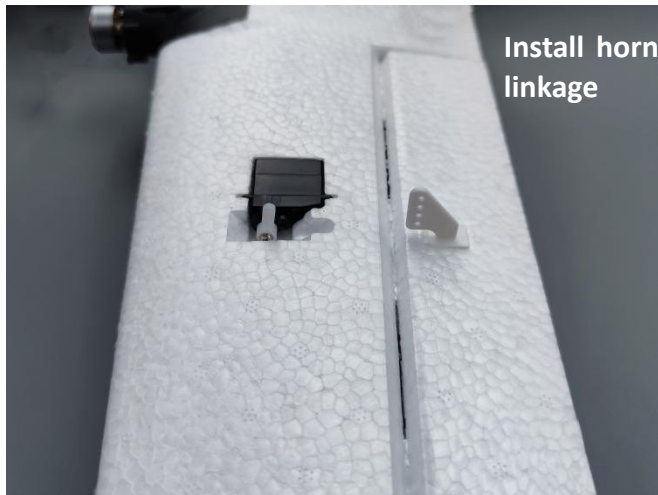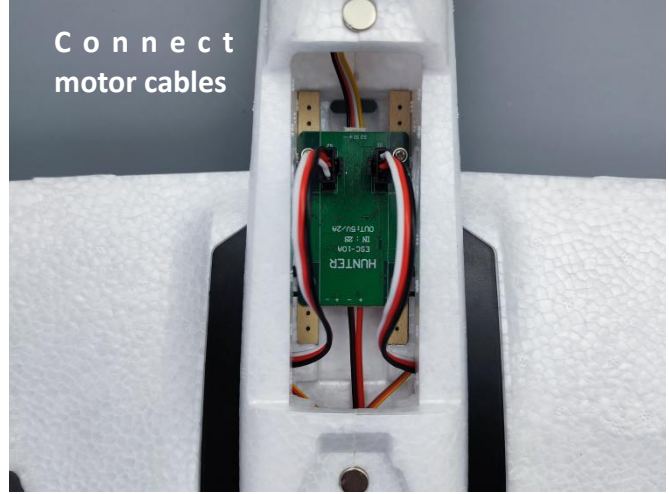

Note: When installing horn linkages, power on the servo and return it to the center position.

H-1 Assembly

 Install H-1

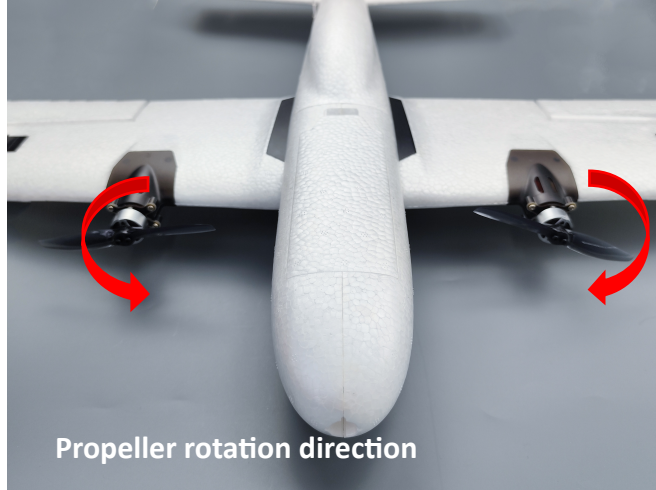

Note: Before installing the propeller, ensure the correct motor rotation direction.

Assembly Completed

